


BOTTLE FITTING CONNECTION PROCEDURE

- 1 PIERCE CENTRE OF RUBBER STOPPER WITH STERILE HYPODERMIC NEEDLE TO ASSIST IN PENETRATION OF DRAW-OFF.

FIG. 1

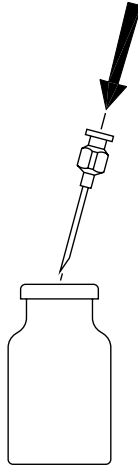

- 2 GRASP FIRMLY AS SHOWN THEN TWIST AND PUSH DRAW-OFF INTO THE BOTTLE.

FIG. 2

